





## REAR DOOR LOCK


6. Working through the access hole, disconnect outside handle release cable (on the handle) at the joint.

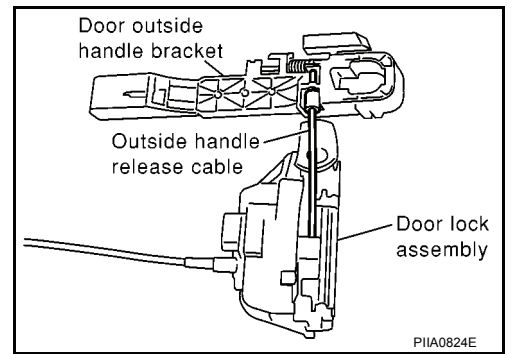

7. Remove outside handle grip.
8. Remove outside handle bracket.

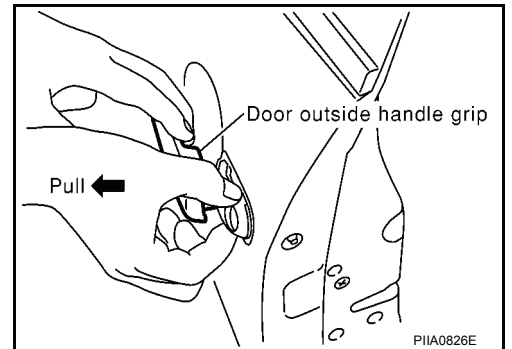

9. Disconnect door lock actuator connector.
10. Remove mount screw and remove door lock assembly through the access hole.

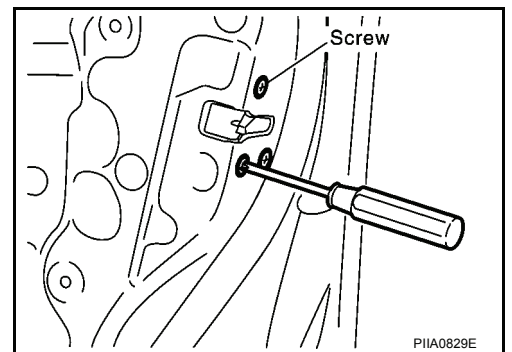

### INSTALLATION

Install in the reverse order of removal.

#### NOTE:

- Install the outside handle by pressing it forward and downward while tightening the bolts.