


TM8024 - Premium Tractors 6830 and 6930 Repair Rockshaft - Remove Rockshaft Cylinders

Rockshaft - Remove Rockshaft Cylinders

1.

 **CAUTION:**

Comply with safety instructions; see reference "Hydraulic System - General Instructions on Safety and Repair" in Section 70, Group 15.

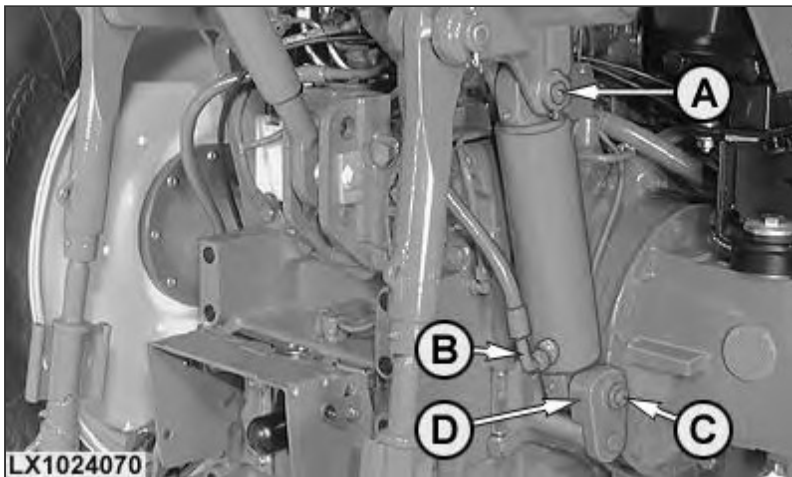

LX1024070-UN: Rockshaft cylinders, removing

Before removing the two rockshaft cylinders, remove the position sensor or hold the lift arms in the middle position!

2. Remove pressure line (B).
 3. Take out pins (A).
 4. Remove screw (C) and support plate (D).
 5. Take off rockshaft cylinders.
-

LX24603,00004B8-19-20060619