



Ident - Nummern - Konstante
3740

Gebrauchsanweisung
58 6457
(de,en,fr,it,es,pt,el,nl)
58 6458
(sv,no,fi,da,pl,ro,hu,ru)

Montageanweisung
58 9156
(de,en,fr,it,es,pt,el,nl,cs,
no,fi,da,pl,ro,hu,ru)

- 1) 16 8766
Rep. Satz
- 2) 16 9176
- 3) 18 4426
- 4) 18 4428
- 5) 18 4433
- 6) 42 5312

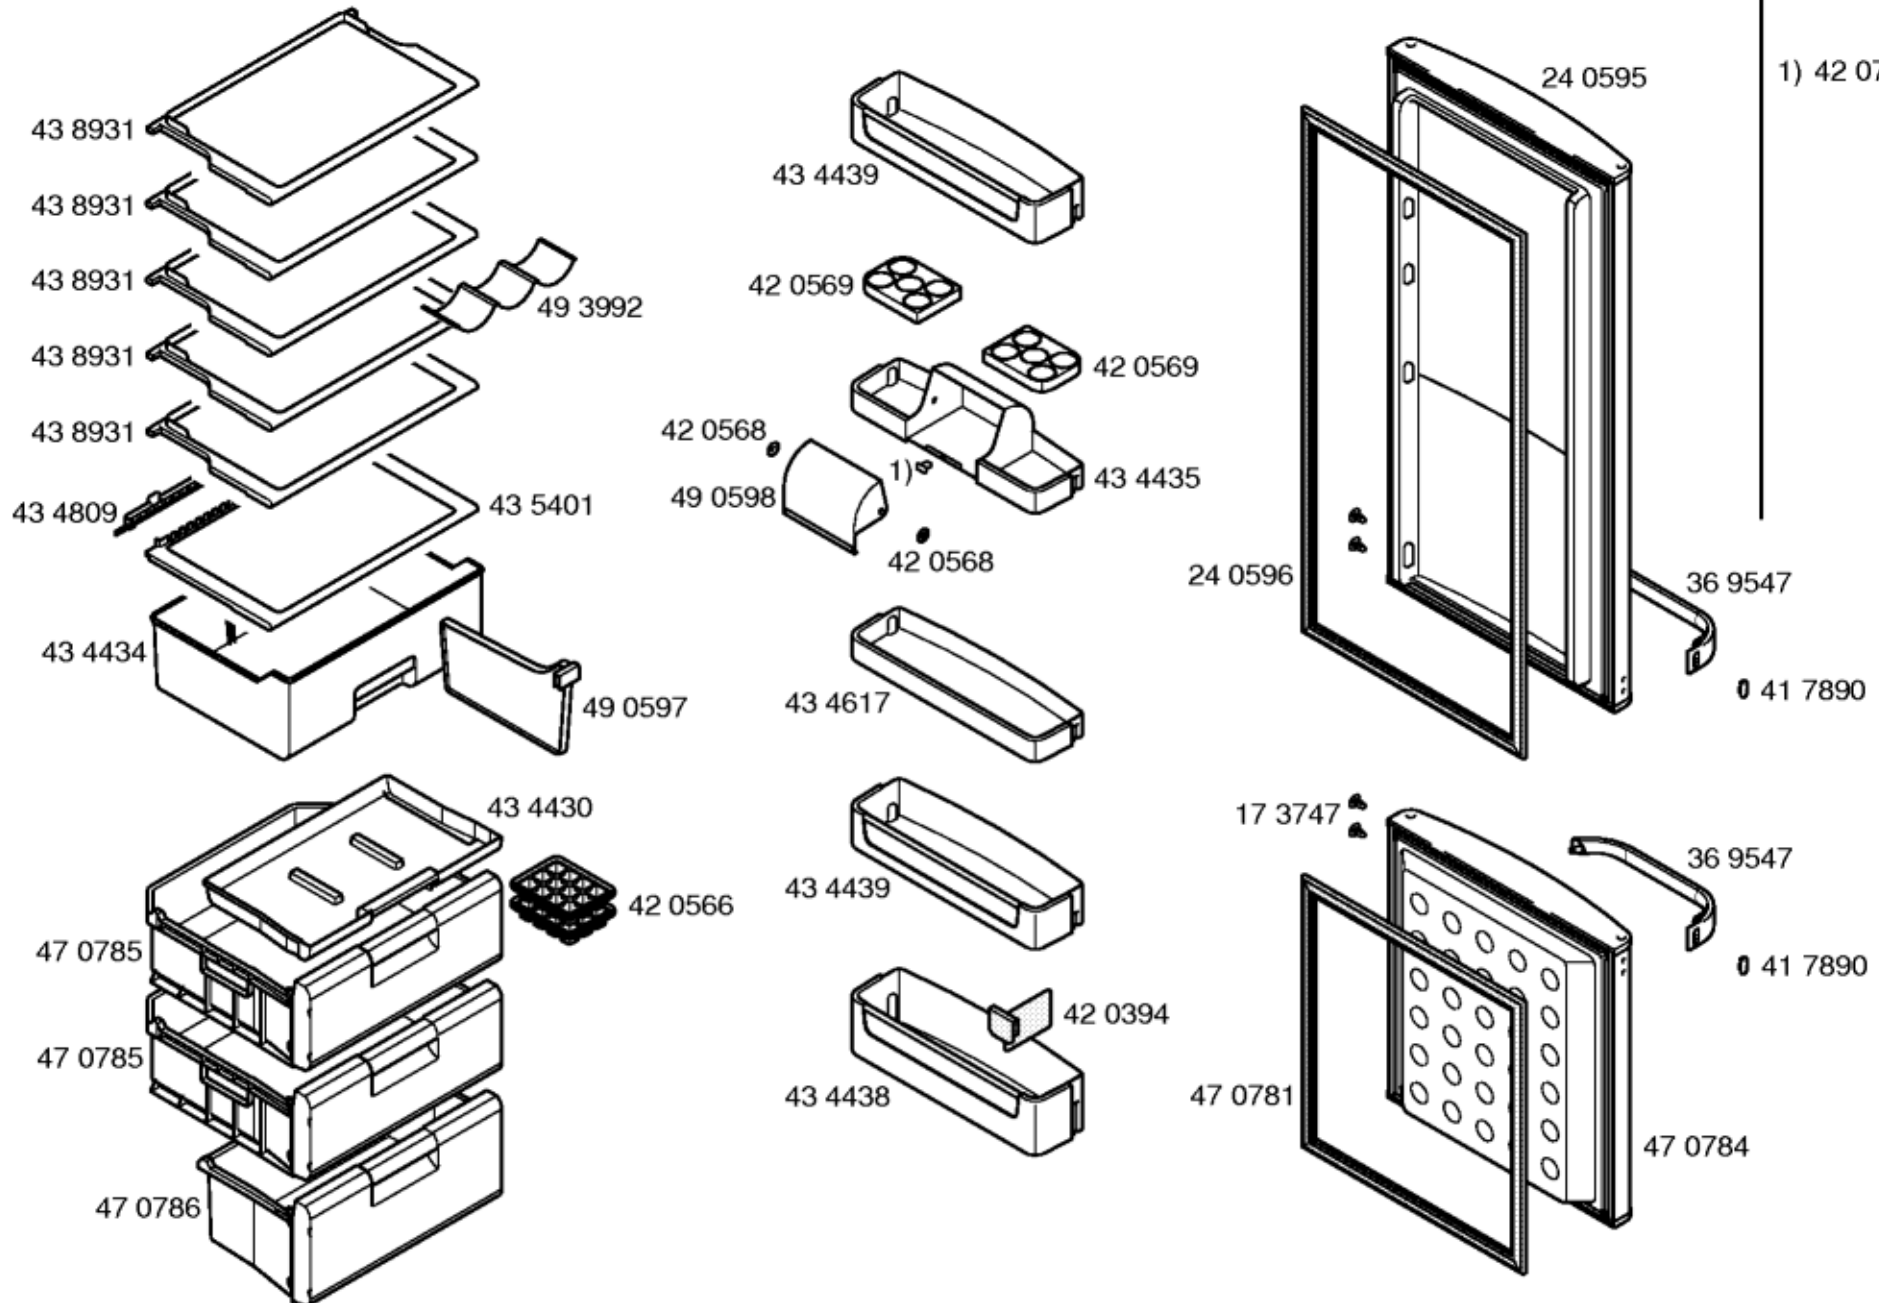

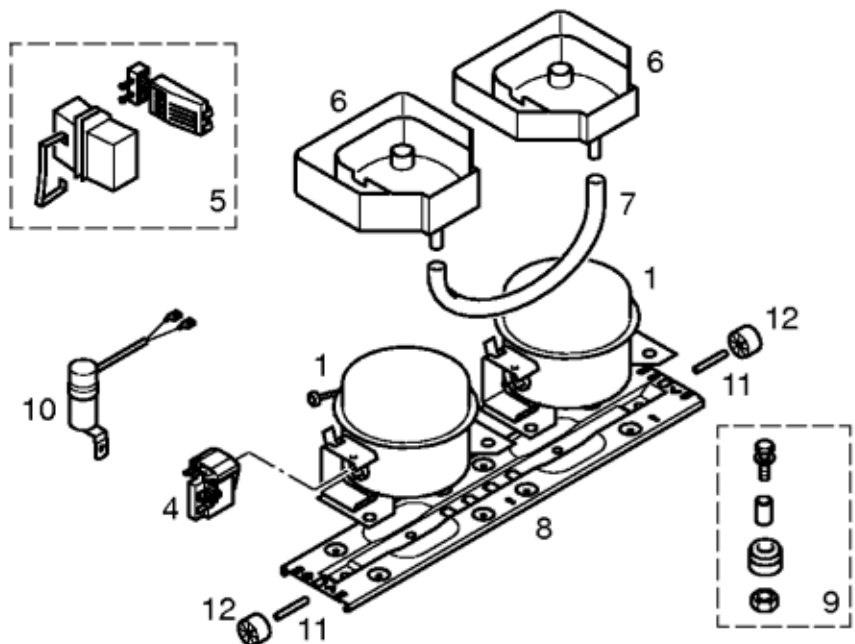

Pos.	****	
	LG	Aspera
	NDA62NAEG	EMU32CLC
1	14 2000	14 2004
2		
3		
4	17 1011	42 0759
5		
6	49 0594	49 0596
7	49 0755	49 0755
8	44 0795	44 0795
9	05 0166	05 0166
10		
11	15 2770	15 2770
12	03 1961	03 1961
13		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS			

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo	LG NDA62NAEG	Aspera EMU32CLC	
Förderleistung/Delivery/Debit/Aspiración l/h			
Stromm/Current (FLA)/Courant/Intensidad	LMBP A	0,48	0,44
Widerstand/Resistance/Resistencia.	Ha/main/prin. Ohm	35,21	38,90
	Hi/sub/aux. Ohm	21,49	28,30
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo	Electronic. KS E2000 Komfort	Electronic. GS E2000 Komfort	
Reglerstellung/Position/Conexión	MIN. MAX.	MIN. MAX.	MIN. MAX.
Schaltwerte/Switching values/ Valeurs de commutation/Desconex.	..ein/conexión °C ..aus"/desconex. °C (..abtaven' od) ..alarm' °C	11 1 10 0	-17,5 -25'5 -18,5 -26,5
Verdampfersensor/Evaporator sensor/Sonda evaporador Schaltwerte/Switching values/ Valeurs de commutation/Desconex.	..ein/conex. °C ..aus"/descon. °C	4 4 — —	
Füllmenge/Fill. quantity/Charge/Carga	R600a.	g	* *
Anschlusswert/Comm. load/Puiss. Connect./Potencia	W	71	71
Heizung/Heater/Chauflage/Resistenc. descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W		
Ventilator/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			

* Siehe Typenschild /See identification plate /Voir plaquette de caractéristiques /Ver plaqueta de características

Plasse ID	Reservevedelsnum	Erstatning	Beskrivelse
0004	00090885		Kabel tilkobling
0006	00093110		Tørrer
0008	00153888		Støtdemper
0010	00420548		Klemmestykke
0012	00214650		Utløpsrenne
0014	00066889		Holder
0020	00423754	00622591	Fot
0022	00423886		Dør lager
0026	00423891	00604194	Bøssing
0028	00605746		Dør hengsel
0032	00029969		Deksel
0032	00163140		Støpsel
0034	00420544		Dør hengsel
0036	00184304		Bøssing
0042	00420546		Klemmestykke
0044	00420547	00643134	Klemmestykke
0046	00264568		Holder
0048	00365452		Dekorlist
0050	00172292		Demper
0054	00490578		Motor vifte
0056	00490577		Karosseri lampe
0058	00039338	00602674	Lampe
0060	00032815		Sokkel
0062	00490574		Karosseri lampe
0064	00420545		Klemmestykke
0068	00420667		NTC føler
0070	00169176		Deksel

0072	00363290		Klemmestykke
0080	00184380	00427183	Lysleder
0082	00168427		Bryter
0084	00184438		Bryterhette
0086	00184426	00427806	Bryterhette
0088	00184433	00427182	Lysleder
0090	00184428	00429477	Bryterhette
0092	00184583	00421447	Dørbryter
0094	00434711		Panel
0096	00184584		Deksel
0098	00165567	00163318	Lokk
0200	00240595		Dør
0202	00240596		Dør pakning
0204	00470784	00477013	Frysedør
0206	00470781		Dør pakning
0208	00369547		Håndtak
0210	00417890		Deksel
0212	00173747		Støpsel
0230	00438931		Glassplate
0232	00435401		Glassplate
0234	00434809		Klemmestykke
0236	00434434		Skyvekasse
0238	00490597		Klemmestykke
0240	00493992	00648721	Flaskehylle
0250	00434430		Hylle
0252	00470785		Frysebeholder
0254	00470786		Frysebeholder
0256	00420566	00654106	Is boks
0270	00434435		Hylle

0272	00420751		Stop
0274	00490598		Klaff
0276	00420568		Hylse
0278	00420569		Egge holder
0280	00434617		Hylle
0282	00434439		Hylle
0284	00434438		Hylle
0286	00420394		Klemmestykke
0312	00490755	00678784	Overløpslange
0316	00050166	00427279	Festemateriell
0320	00152770		Aksel
0322	00031961		Hjul
0040	00474095		Fordamper
0074	00494857	00499457	Kontroll modul
8404	00586458	00698718	Bruksanvisning
8406	00589156		Monterings anvisning
0314	00440795	00666332	Holder
0024	00424801		Dør lager
0030	00182147		Deksel
0016	00440260		Panel sokkel
0018	00425312		Deksel
0306	00142004		Kompressor
0308	00420759	00420461	Start utstyr
0310	00490596		Kondensator beholder
0300	00142000	00142004	Kompressor
0302	00171011		Start rele
0304	00490594		Kondensator beholder